

Professional Air Washer Plus™

Model VW-SF10CA

Key Features

1. **Uses ordinary tap water to safely and effectively purify the air w/o any harmful side effects or ozone generation.**

The Sanyo electrolyzed water technology transforms ordinary tap water to safely remove up to 99% of viruses, bacteria, mold spores, dust particles, allergens, odors, smoke, and VOCs without generating any harmful ozone.


2. **Treats up to 20,000 cubic feet per hour**

The Air Washer Plus uses electrolyzed water technology to safely remove airborne microorganisms by moving large volumes of air through its cleansing disinfectant element. The system moves and treats up to 20,000 cubic feet per hour on the high setting, treating the air in spaces in up to 1050 sq. ft.

3. **Reduces airborne viruses, bacteria and VOCs .**

The electrolyzed water used by the system is generated by combining tap water with electricity, unleashing both hypochlorous acid and OH radicals that work to clean the air without requiring any additional chemicals. This unique use of electrolyzed water not only helps treat the air for allergens, dust and mold, but also helps to reduce microorganisms, VOCs, and bacteria.

What is electrolyzed water?

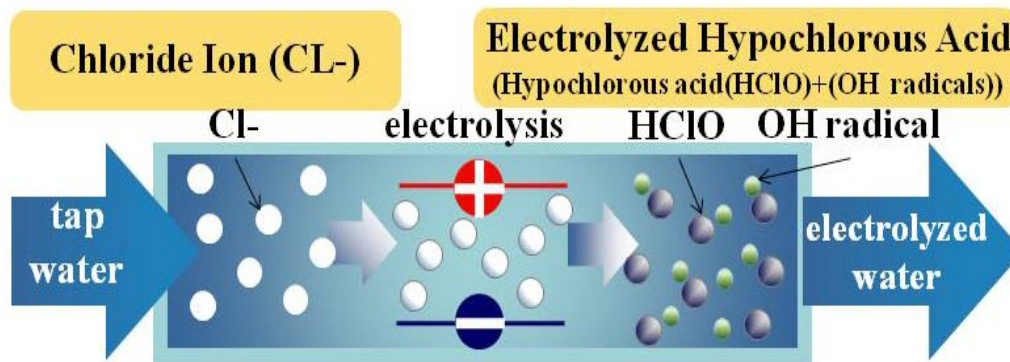

Generating electrolyzed water from tap water containing chloride ions, 2 types of active oxygen are created, namely hypochlorous acid and OH radical